
## 3" ROUND TUBE



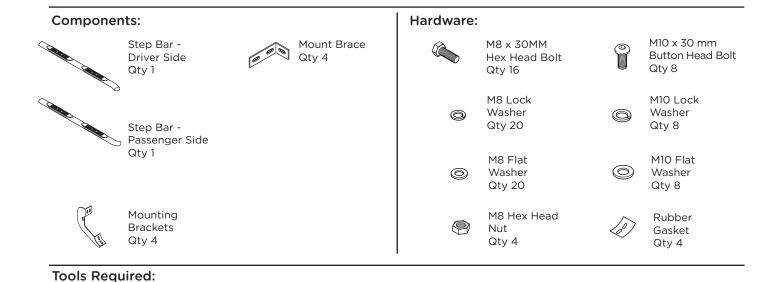

## **Torque Specifications:**

RATCHET

For Rocker Panel Mount Installations M8 through M12 bolts and nuts are set to 15-20 ft lbs.

**TORQUE** 

WRENCH


## Note: When installing the brackets and bars, all hardware must be left loose until all the items are attached.

1

6MM HEX BIT


14MM SOCKET

- 1. Remove all contents from the package and check stainless steel tubes for any damage. Also, verify that all components and hardware listed above are included before you begin installation.
- **2.** Read installation manual and installation drawing completely. Understand all brackets and bolts before installation.
- **3.** Begin installation on the passenger's side.

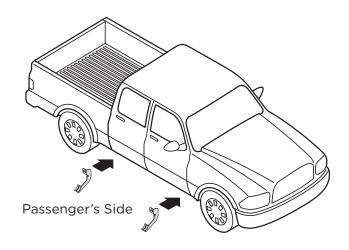



0101-0316

**4.** Align Mounting Brackets with two (2) holes found on the rocker panel (4a) and secure by using two (2) M8 x 30MM Hex Head Bolts, two (2) M8 Lock Washers and two (2) M8 Flat Washers (4b). Repeat this procedure for installation of all Mounting Brackets.

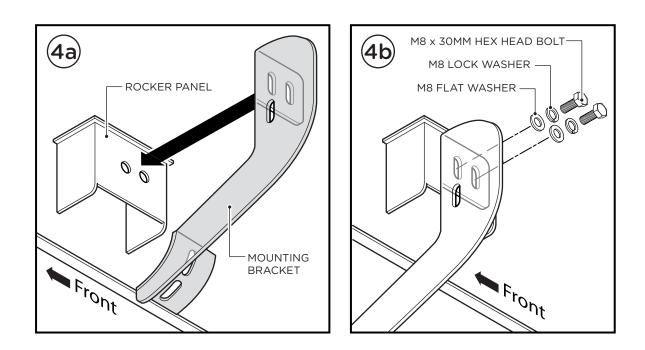

**5.** Align Mount Brace to hole in the rockel panel and fasten using one (1) M8 x 30MM Hex Head Bolt, one (1) M8 Lock Washer and one (1) M8 Flat Washer as shown in (5a) & (5b). Next, fasten the Mount Brace to the Mounting Bracket using one (1) M8 x 30MM Hex Head Bolt, one (1) M8 Lock Washer, (2) M8 Flat Washers and (1) M8 Hex Head Nut as shown in (5c).

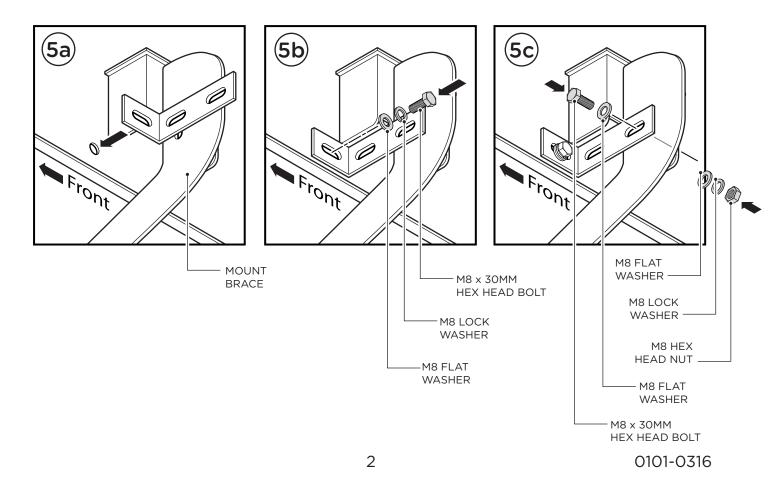

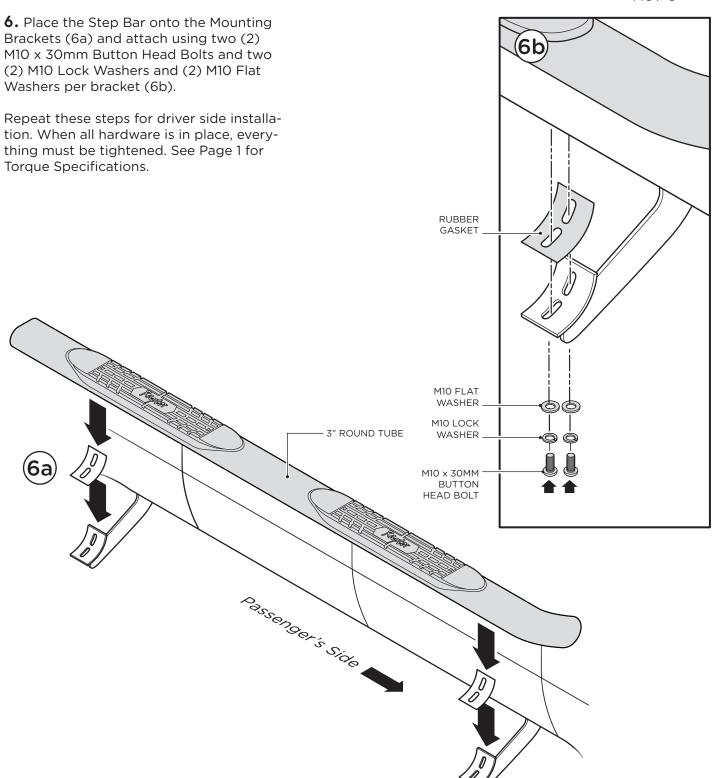

3 0101-0316