
BRACKET KIT INSTALLATION

SKU# RB-0201-BK




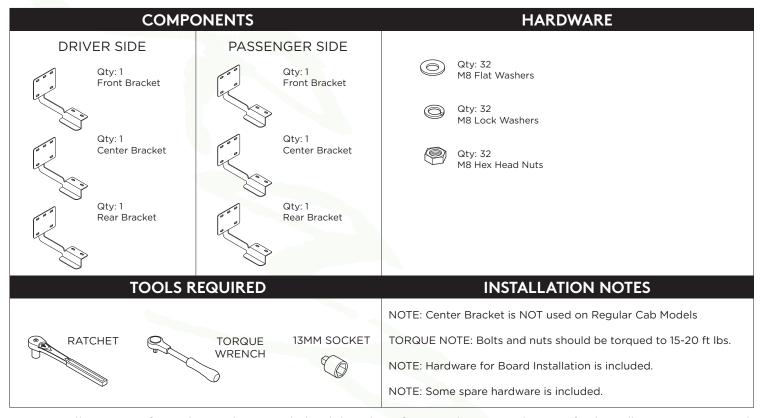


Remove all contents from the package and check brackets for any damage. Also, verify that all components and hardware listed above are included before you begin installation. If anything is missing or damaged please contact us at customerservice@cyc-engineering.com

Read through entire installation manual and installation drawings to ensure that you understand all of the components and hardware before proceeding with installation.

NOTE: When installing the brackets, all hardware must be left loose until all of the items are attached.

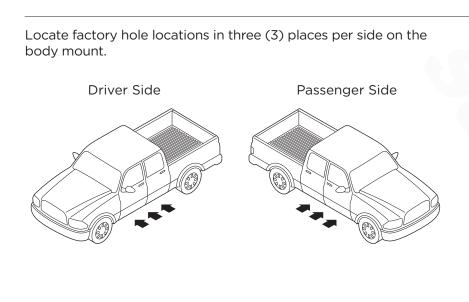

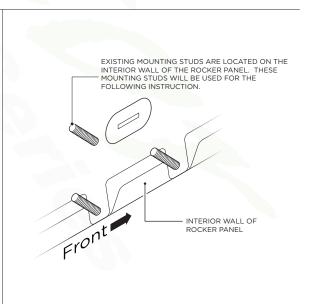

BRACKET ORIENTATION


DRIVER SIDE

*NOTE: Center Bracket is NOT Used on Regular Cab Models




1. Begin installation on driver side. Position the Front Bracket, Center Bracket and Rear Bracket as shown in diagram.


2. Driver Side Front Bracket cradle (2a), Center Bracket cradle (2b) and Rear Bracket cradle (2c) will face toward the rear of the truck.

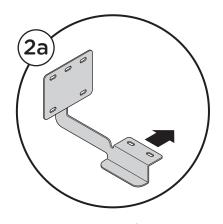

Driver Side Front Bracket

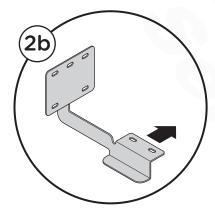

Driver Side Center Bracket

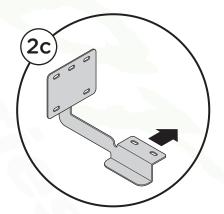


Driver Side Rear Bracket

BRACKET INSTALLATION


DRIVER SIDE




3. Fasten the top portion of the Driver Side Front Bracket by using (3) M8 Hex Head Nuts, (3) M8 Flat Washers and (3) M8 Lock Washers.

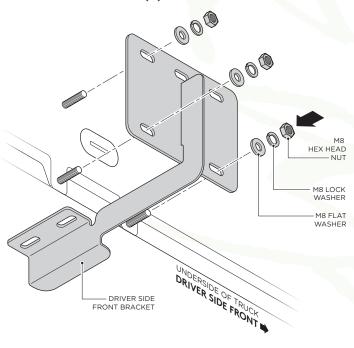

4. Fasten the top portion of the Driver Side Center Bracket by using (3) M8 Hex Head Nuts, (3) M8 Flat Washers and (3) M8 Lock Washers.

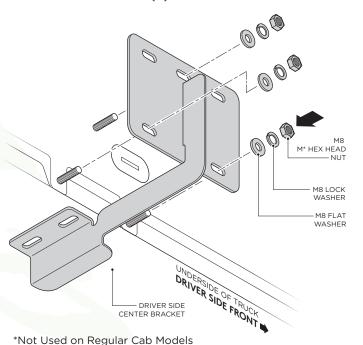

5. Fasten the top portion of the Driver Side Rear Bracket by using (3) M8 Hex Head Nuts, (3) M8 Flat Washers and (3) M8 Lock Washers.

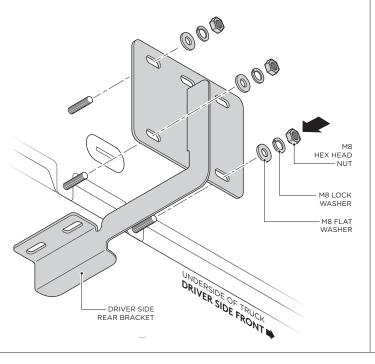


RUNNING BOARD INSTALLATION


DRIVER SIDE




6. Fasten the Running Board to the Driver Side Front Bracket cradle by using (2) M8 Flat Washers, (2) M8 Lock Washers and (2) M8 Hex Head Nuts.

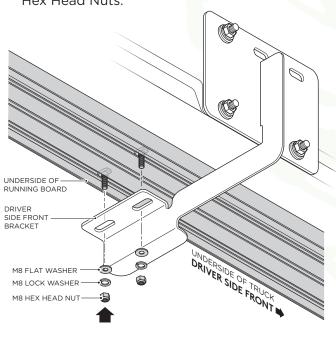

7. Fasten the Running Board to the Driver Side Center Bracket cradle by using (2) M8 Flat Washers, (2) M8 Lock Washers and (2) M8 Hex Head Nuts.

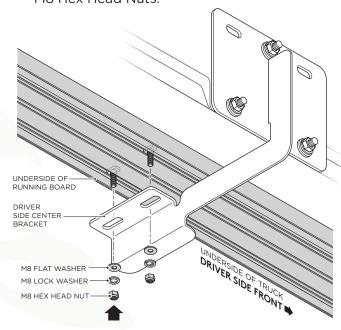

8. Fasten the Running Board to the Driver Side Rear Bracket cradle by using (2) M8 Flat Washers, (2) M8 Lock Washers and (2) M8 Hex Head Nuts.

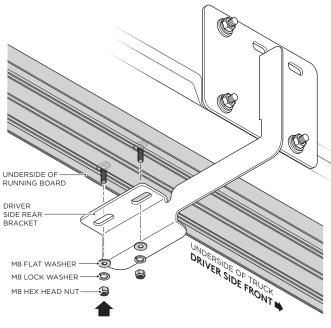




BRACKET ORIENTATION

PASSENGER SIDE


*NOTE: Center Bracket is NOT Used on Regular Cab Models




1. Begin installation on passenger side. Position the Front Bracket, Center Bracket and Rear Bracket as shown in diagram.

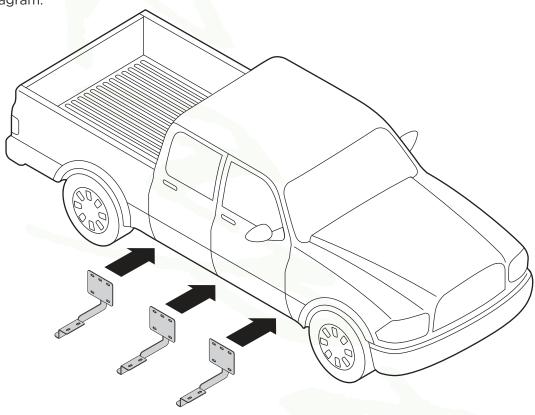


2. Passenger Side Front Bracket cradle (2a), Center Bracket cradle (2b) and Rear Bracket cradle (2c) will face toward the front of the truck.

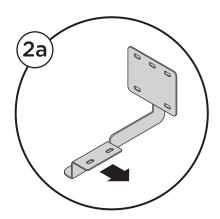

Passenger Side Front Bracket

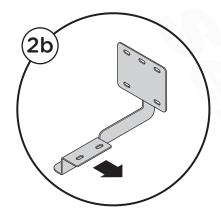

Passenger Side Center Bracket

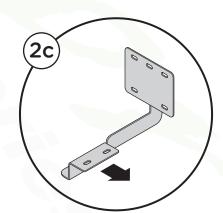


Passenger Side Rear Bracket

BRACKET INSTALLATION


PASSENGER SIDE



3. Fasten the top portion of the Passenger Side Front Bracket by using (3) M8 Hex Head Nuts, (3) M8 Flat Washers and (3) M8 Lock Washers.

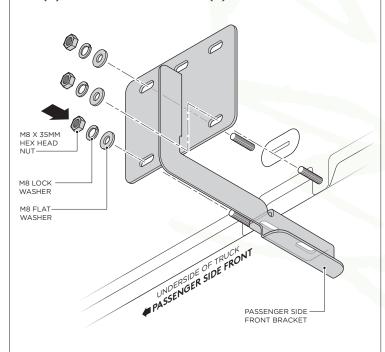


4. Fasten the top portion of the Passenger Side Center Bracket by using (3) M8 Hex Head Nuts, (3) M8 Flat Washers and (3) M8 Lock Washers.

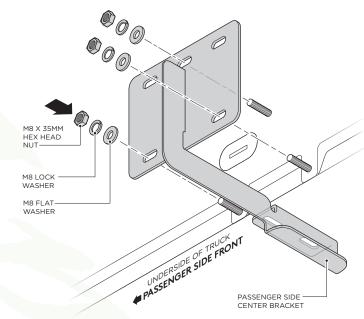

*Not Used on Regular Cab Models

5. Fasten the top portion of the Passenger Side Rear Bracket by using (3) M8 Hex Head Nuts, (3) M8 Flat Washers and (3) M8 Lock Washers.

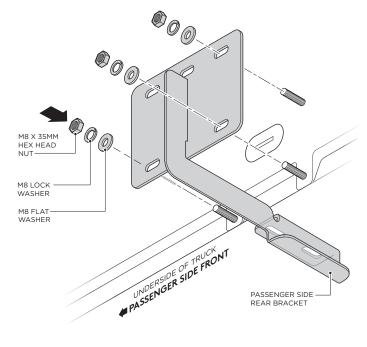


RUNNING BOARD INSTALLATION


PASSENGER SIDE



6. Fasten the Running Board to the Passenger Side Front Bracket cradle by using (2) M8 Flat Washers, (2) M8 Lock Washers and (2) M8 Hex Head Nuts.

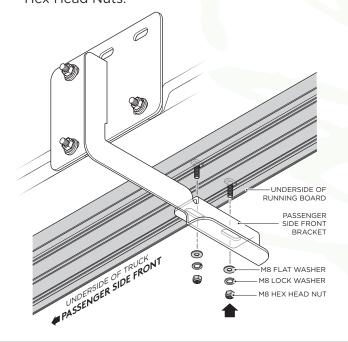

7. Fasten the Running Board to the Passenger Side Center Bracket cradle by using (2) M8 Flat Washers, (2) M8 Lock Washers and (2) M8 Hex Head Nuts.

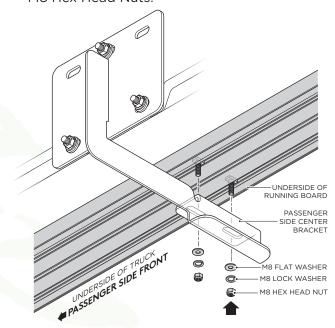

8. Fasten the Running Board to the Passenger Side Rear Bracket cradle by using (2) M8 Flat Washers, (2) M8 Lock Washers and (2) M8 Hex Head Nuts.

