








BRACKET KIT INSTALLATION

SKU# RB-0400-BK

Raptor
Series


COMPONENTS		HARDWARE
DRIVER SIDE  Qty: 1 Front Bracket  Qty: 1 Center Bracket  Qty: 1 Rear Bracket	PASSENGER SIDE  Qty: 1 Front Bracket  Qty: 1 Center Bracket  Qty: 1 Rear Bracket	 Qty: 12 M8 x 30MM Flange Bolts  Qty: 12 M8 Flange Nuts
TOOLS REQUIRED		INSTALLATION NOTES
 METRIC/STANDARD RATCHET  TORQUE WRENCH  13MM SOCKET		TORQUE NOTE: Bolts and nuts should be torqued to 15-20 ft lbs. NOTE: Hardware for Board Installation is included. NOTE: Some spare hardware is included.

Remove all contents from the package and check brackets for any damage. Also, verify that all components and hardware listed above are included before you begin installation. If anything is missing or damaged please contact us at customerservice@cyc-engineering.com

Read through entire installation manual and installation drawings to ensure that you understand all of the components and hardware before proceeding with installation.

NOTE: When installing the brackets, all hardware must be left loose until all of the items are attached.

Locate factory hole locations in three (3) places per side on the body mount.

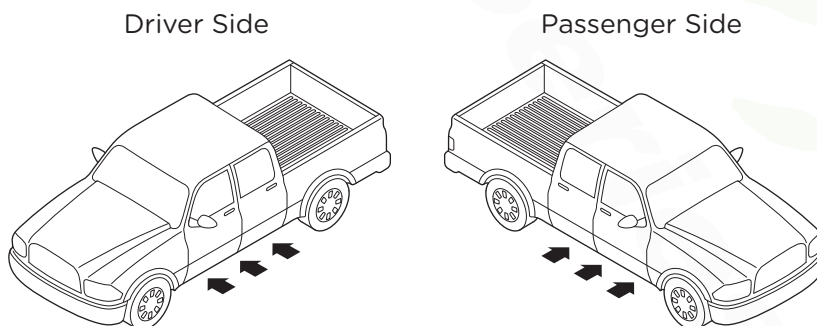


BRACKET ORIENTATION

DRIVER SIDE

Raptor
Series

1. Begin installation on driver side. Position the Front Bracket, the Center Brackets and the Rear Bracket as shown in diagram.

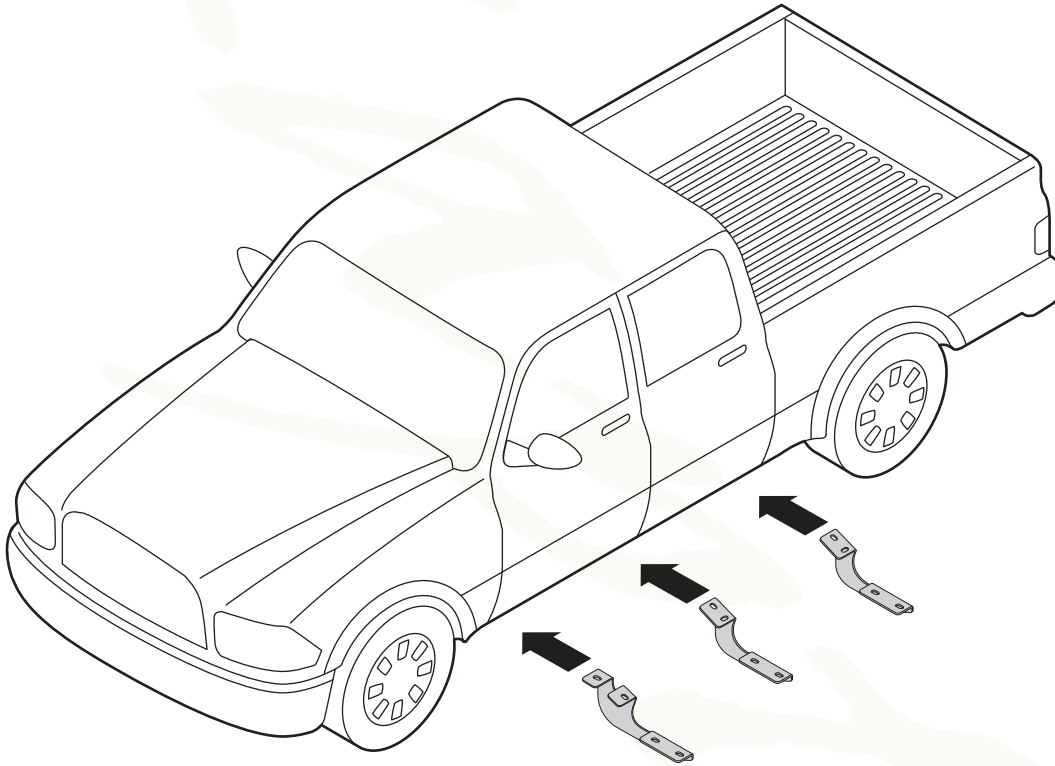


BRACKET INSTALLATION


DRIVER SIDE

Raptor
Series


- 2.** Fasten the top portion of the Driver Side Front Bracket by using (2) M8 x 30MM Flange Bolts.

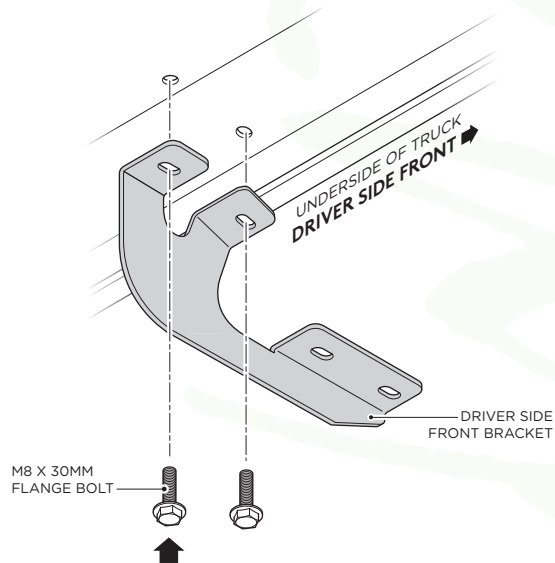

- 3.** Fasten the top portion of the Driver Side Center Bracket by using (2) M8 x 30MM Flange Bolts.

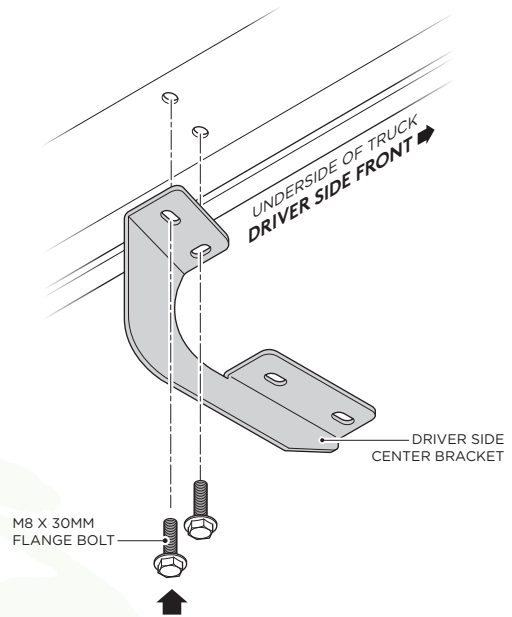

- 4.** Fasten the top portion of the Driver Side Rear Bracket by using (2) M8 x 30MM Flange Bolts.

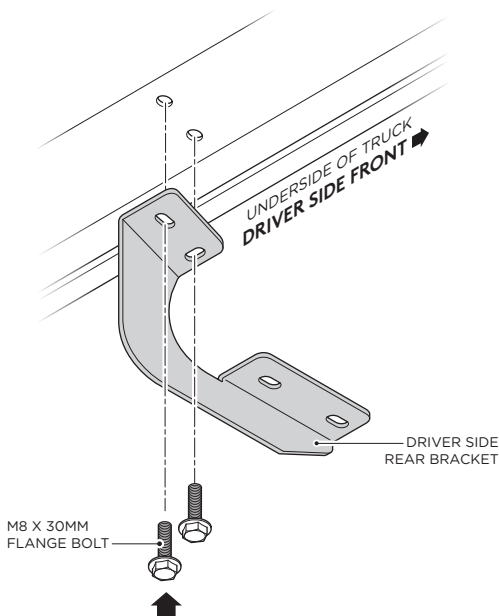


RUNNING BOARD INSTALLATION


DRIVER SIDE

Raptor
Series


5. Fasten the Running Board to the Driver Side Front Bracket cradle by using (2) M8 Flange Nuts.

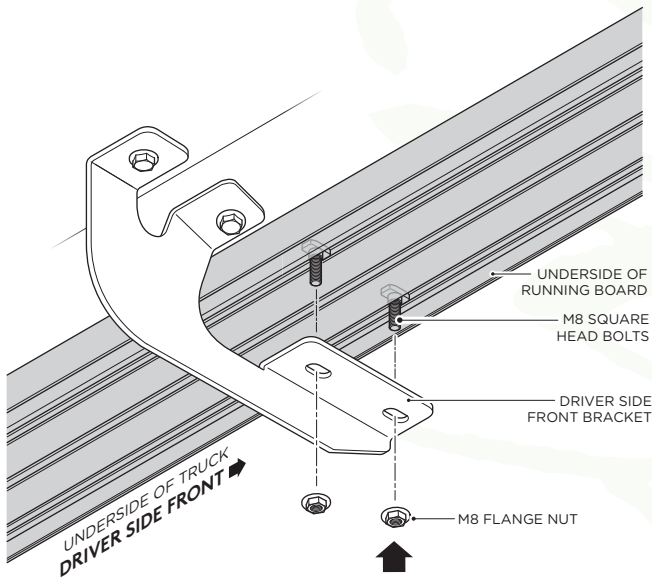

6. Fasten the Running Board to the Driver Side Center Bracket cradle by using (2) M8 Flange Nuts.

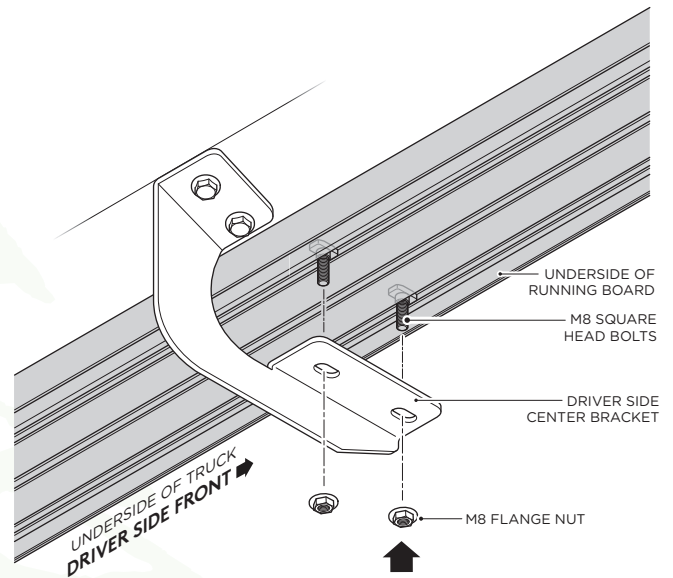

7. Fasten the Running Board to the Driver Side Rear Bracket cradle by using (2) M8 Flange Nuts.

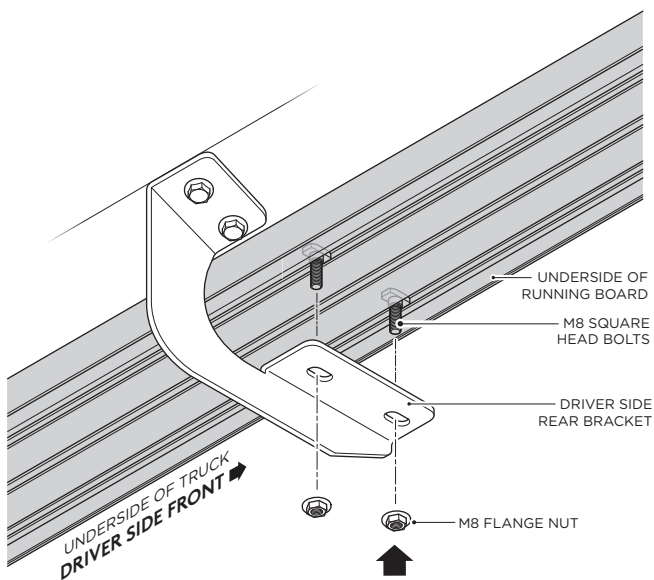


BRACKET ORIENTATION

PASSENGER SIDE

Raptor
Series

1. Begin installation on passenger side. Position the Front Bracket, the Center Brackets and the Rear Bracket as shown in diagram.

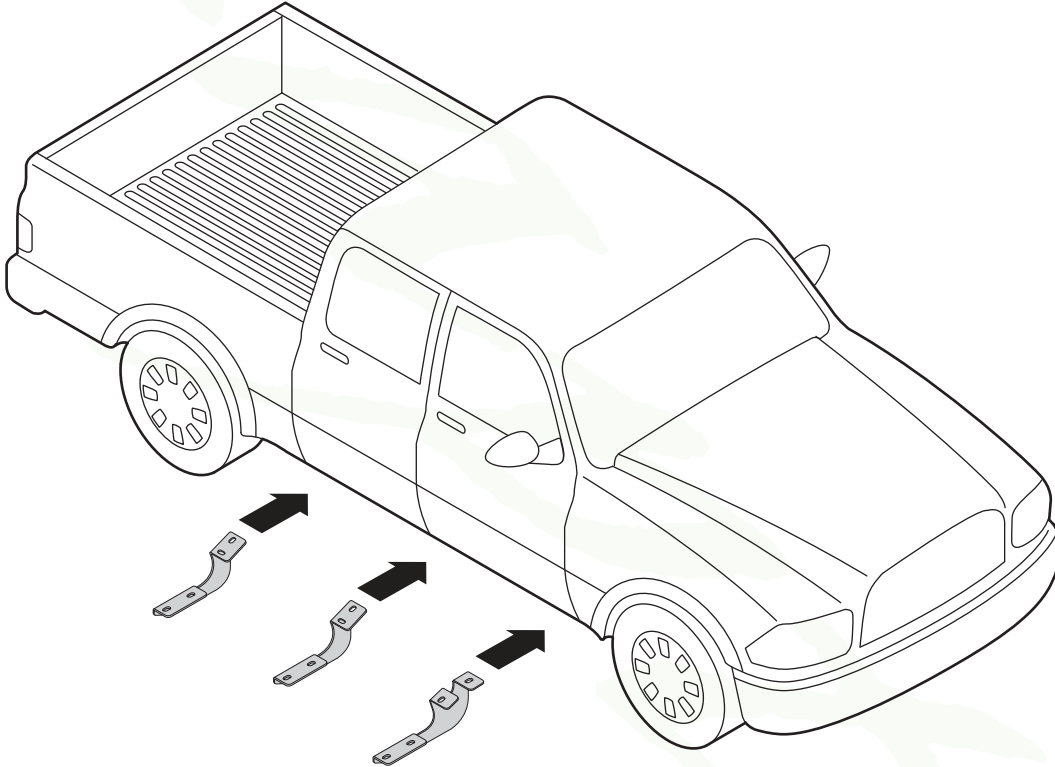


BRACKET INSTALLATION


PASSENGER SIDE

Raptor
Series


- 2.** Fasten the top portion of the Passenger Side Front Bracket by using (2) M8 x 30MM Flange Bolts.

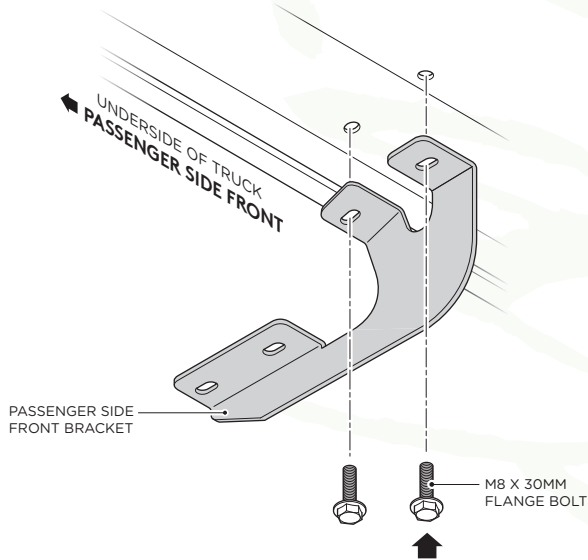

- 3.** Fasten the top portion of the Passenger Side Center Bracket by using (2) M8 x 30MM Flange Bolts.

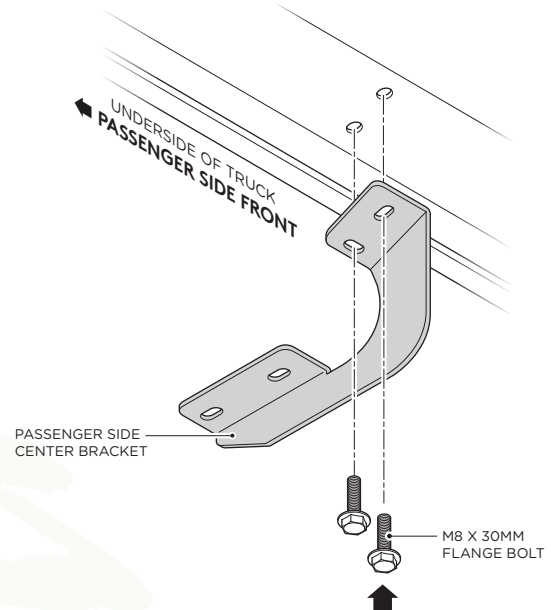

- 4.** Fasten the Running Board to the Driver Side Rear Bracket cradle by using (2) M8 Flange Nuts.

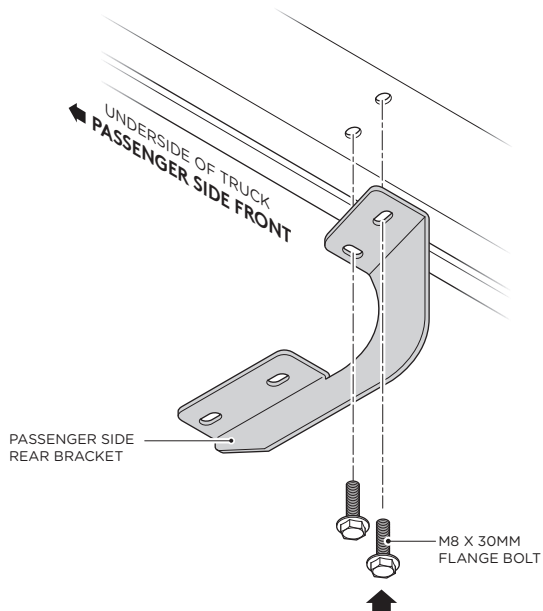


RUNNING BOARD INSTALLATION


PASSENGER SIDE

Raptor
Series

5. Fasten the Running Board to the Passenger Side Front Bracket cradle by using (2) M8 Flange Nuts.

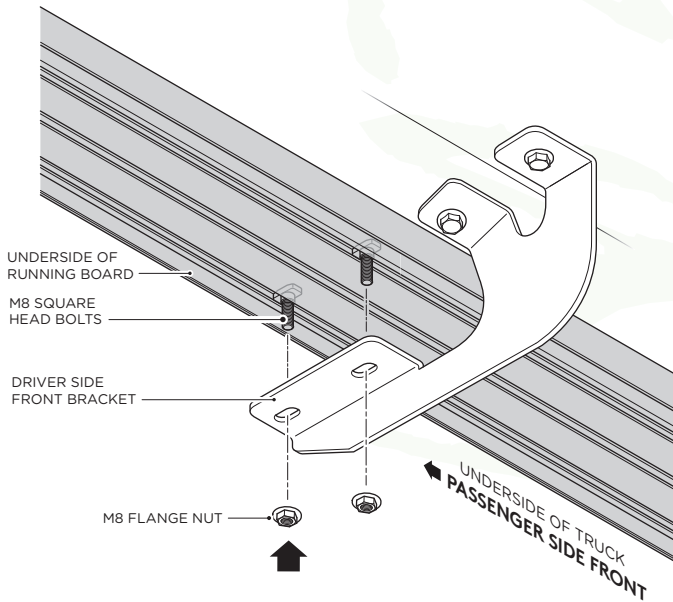

6. Fasten the Running Board to the Passenger Side Center Bracket cradle by using (2) M8 Flange Nuts.

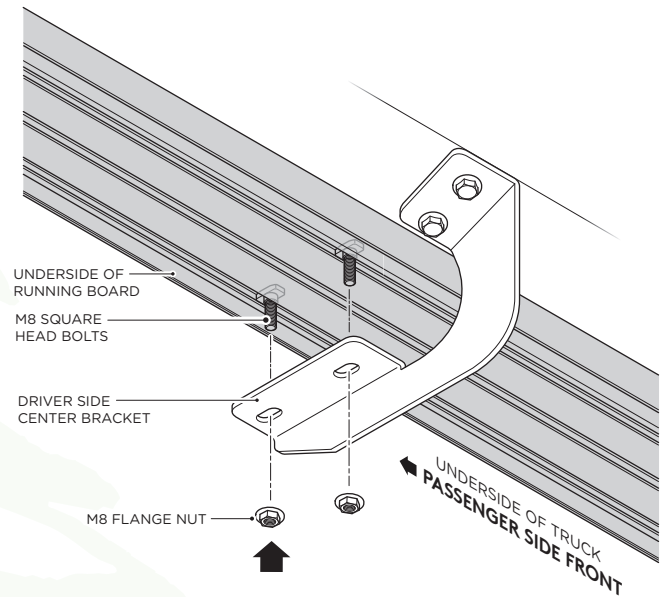

7. Fasten the Running Board to the Passenger Side Rear Bracket cradle by using (2) M8 Flange Nuts.

