









BRACKET KIT INSTALLATION

SKU# RB-0401-BK




COMPONENTS		HARDWARE
DRIVER SIDE Qty: 1 Front Bracket Qty: 2 Center Bracket Qty: 1 Rear Bracket	PASSENGER SIDE Qty: 1 Front Bracket Qty: 2 Center Bracket Qty: 1 Rear Bracket	Qty: 16 M8 x 30MM Flange Bolts Qty: 16 M8 Flange Nuts Qty: 4 M8 Square Head Bolts
TOOLS REQUIRED		INSTALLATION NOTES
RATCHET TORQUE WRENCH 13MM SOCKET		TORQUE NOTE: Bolts and nuts should be torqued to 15-20 ft lbs. NOTE: Hardware for Board Installation is included. NOTE: Some spare hardware is included.

Remove all contents from the package and check brackets for any damage. Also, verify that all components and hardware listed above are included before you begin installation. If anything is missing or damaged please contact us at customerservice@cyc-engineering.com

Read through entire installation manual and installation drawings to ensure that you understand all of the components and hardware before proceeding with installation.

NOTE: When installing the brackets, all hardware must be left loose until all of the items are attached.

Locate factory hole locations in two (4) places per side on the body mount.

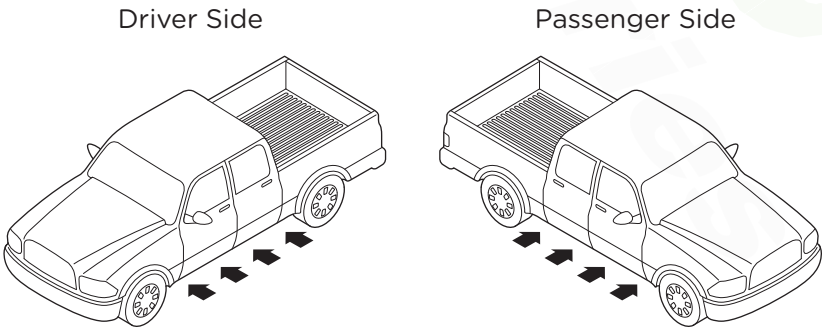


BRACKET ORIENTATION


DRIVER SIDE

Raptor
Series


1. Begin installation on driver side. Position the Front Bracket, the Center Brackets and the Rear Bracket as shown in diagram.

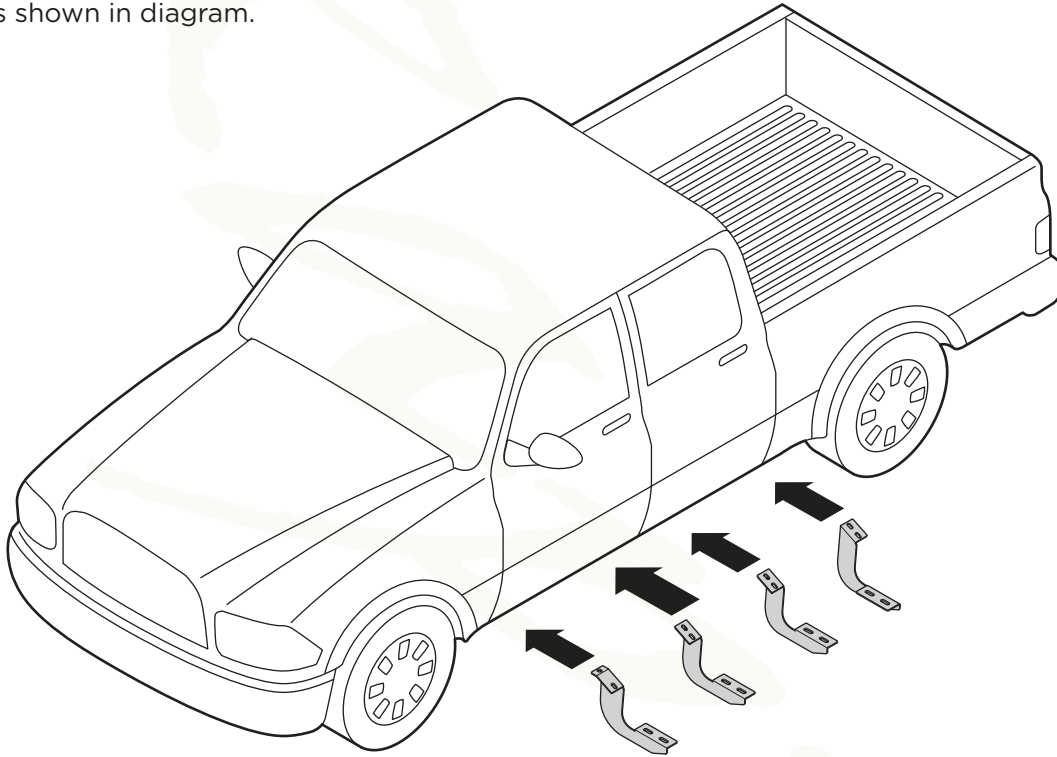


2. Driver Side Front Bracket cradle (2a) and Driver Side Center Bracket cradles (2b, 2c) will face toward the rear of the truck and the Driver Side Rear Bracket cradle (2d) will face toward the front of the truck.

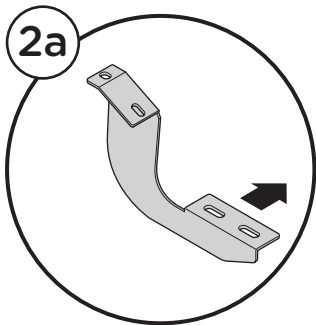


Driver Side
Front Bracket

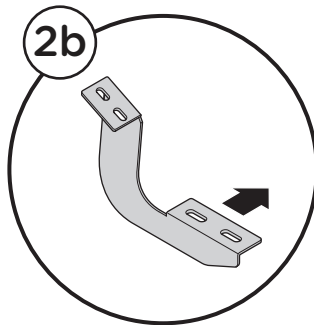

Driver Side
Center Bracket

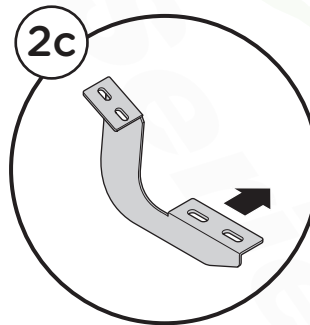

Driver Side
Center Bracket

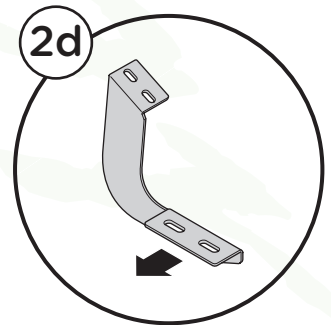


Driver Side
Rear Bracket

BRACKET INSTALLATION


DRIVER SIDE

Raptor
Series


4. Fasten the top portion of the Driver Side Front Bracket by using (2) M8 x 30MM Flange Bolts.

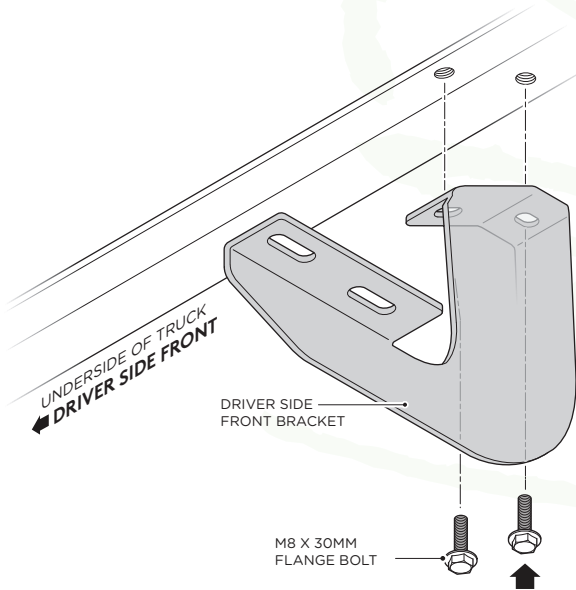


5. Fasten the top portion of the first Driver Side Center Bracket by using (2) M8 x 30MM Flange Bolts.

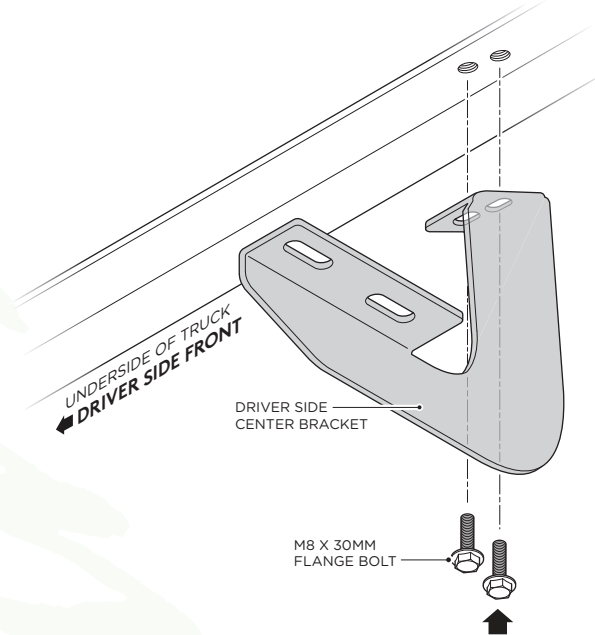

6. Fasten the top portion of the second Driver Side Center Bracket by using (2) M8 x 30MM Flange Bolts.

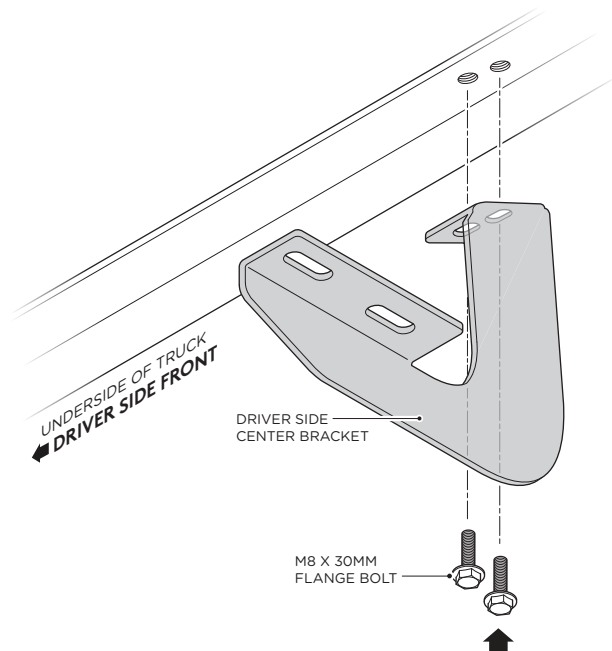

7. Fasten the top portion of the Driver Side Rear Bracket by using (2) M8 x 30MM Flange Bolts.

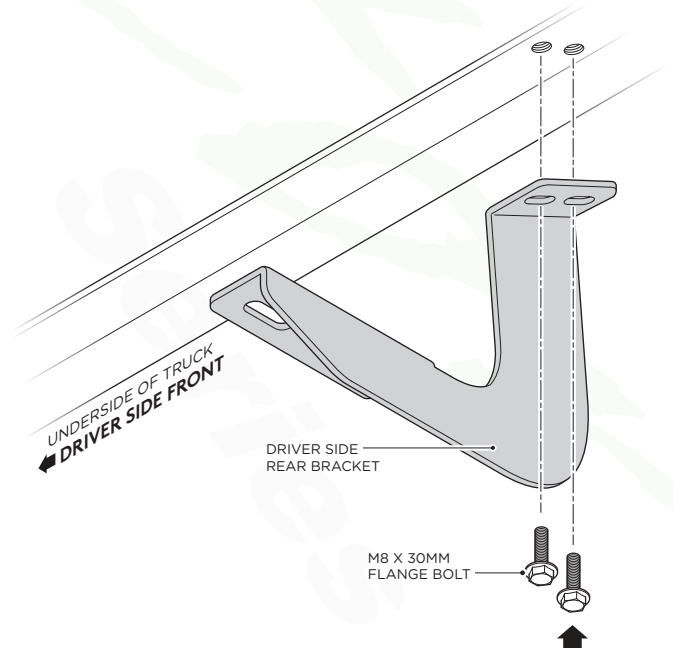


RUNNING BOARD INSTALLATION

DRIVER SIDE


Raptor
Series

NOTE: Jump to pages 8 and 9 for board setup before proceeding with board installation.


- 8.** Fasten the Running Board to the Driver Side Front Bracket cradle by using (2) M8 Flange Nuts.

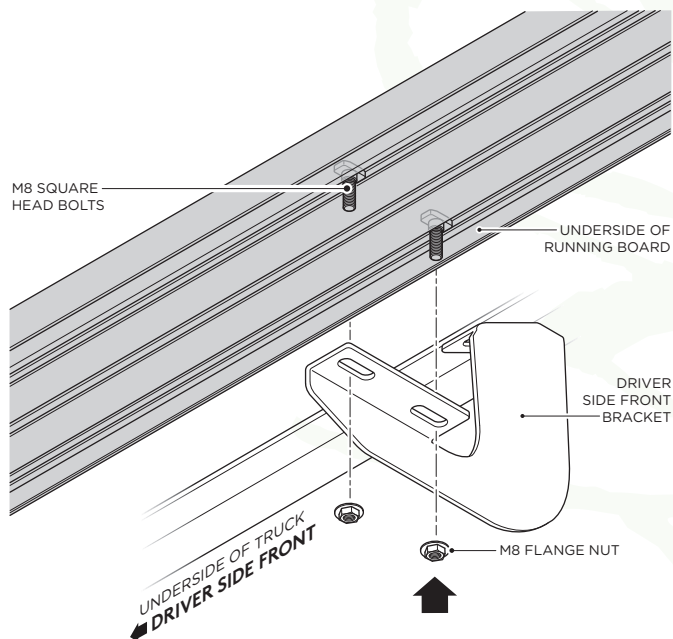


- 9.** Fasten the Running Board to the first Driver Side Center Bracket cradle by using (2) M8 Flange Nuts.

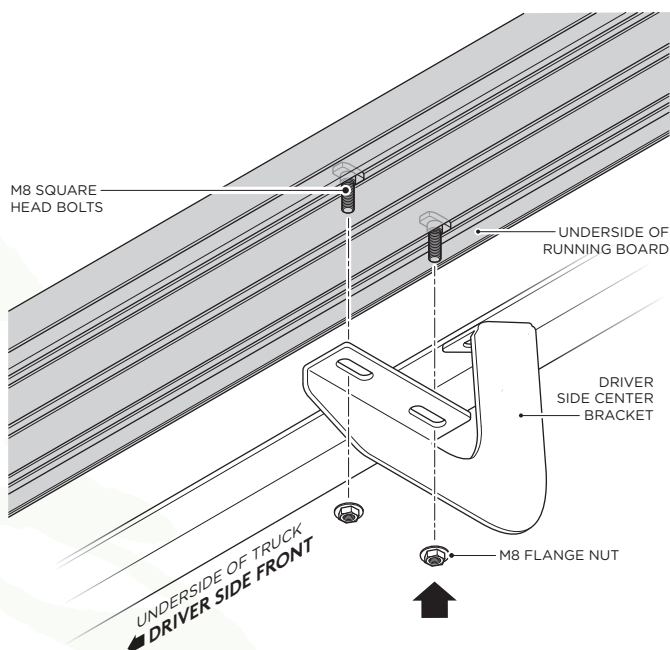

- 10.** To fasten the Running Board to the second Driver Side Center Bracket cradle, insert (2) M8 Square Head Bolts (10a), then fasten using (2) M8 Flange Nuts.

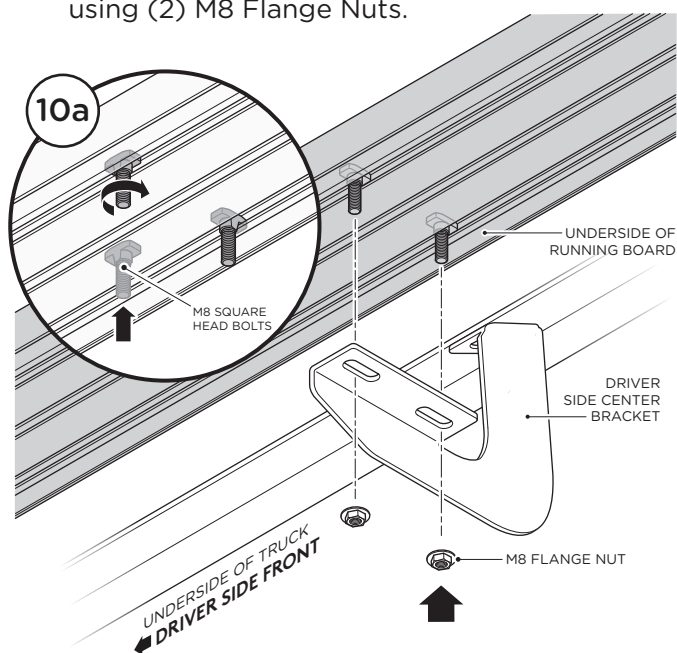

- 11.** Fasten the Running Board to the Driver Side Rear Bracket cradle by using (2) M8 Flange Nuts.

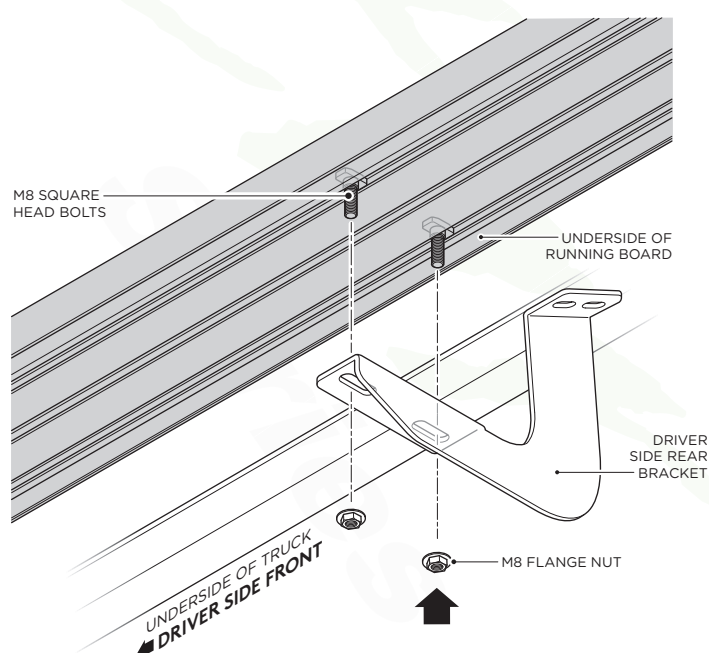


BRACKET ORIENTATION


PASSENGER SIDE

Raptor
Series


1. Begin installation on passenger side. Position the Front Bracket, the Center Brackets and the Rear Bracket as shown in diagram.

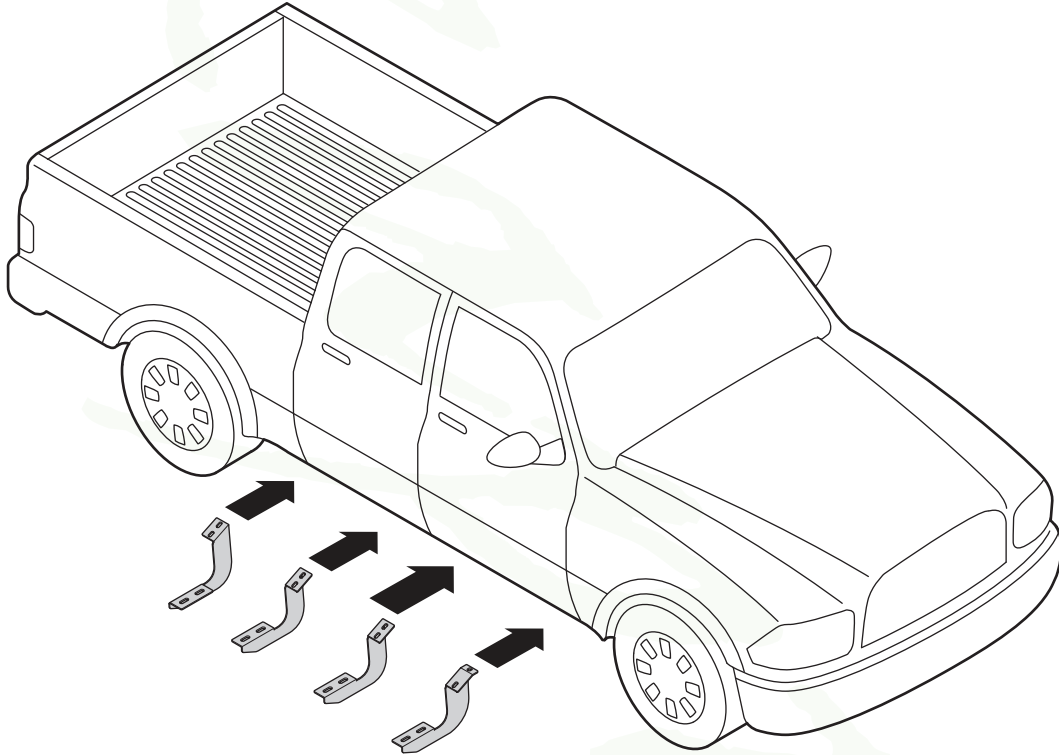


2. Passenger Side Front Bracket cradle (2a) and Passenger Side Center Bracket cradles (2b, 2c) will face toward the rear of the truck and the Passenger Side Rear Bracket cradle (2d) with face toward the front of the truck.

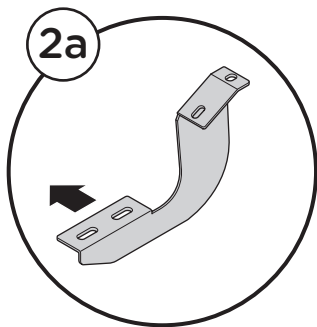


Passenger Side
Front Bracket

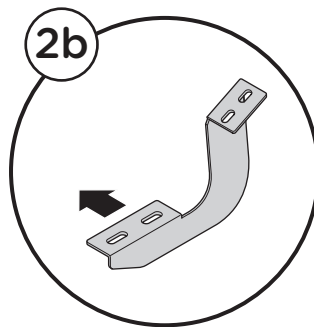

Passenger Side
Center Bracket

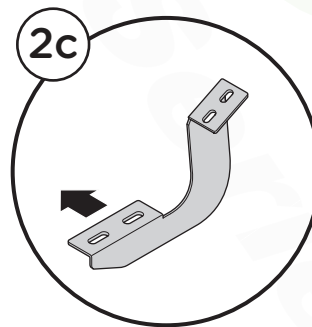

Passenger Side
Center Bracket

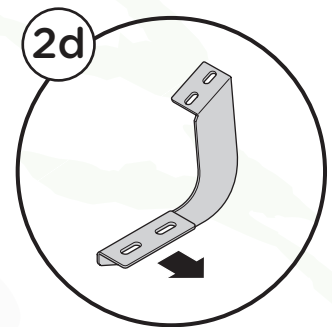


Passenger Side
Rear Bracket

BRACKET INSTALLATION


PASSENGER SIDE

Raptor
Series


4. Fasten the top portion of the Passenger Side Front Bracket by using (2) M8 x 30MM Flange Bolts.

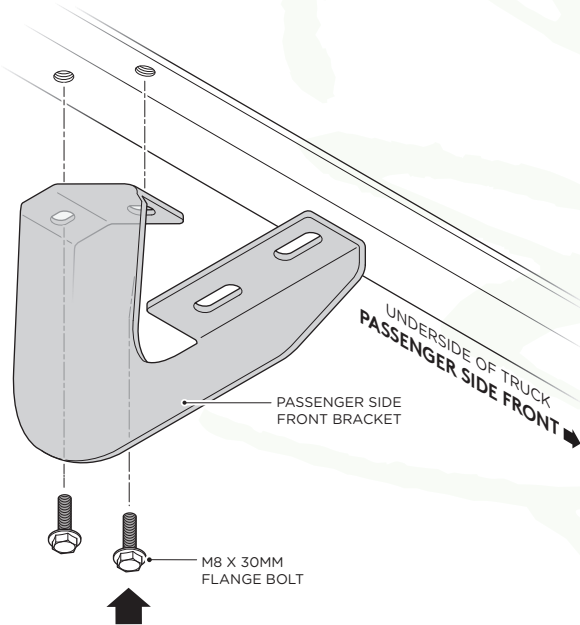


5. Fasten the top portion of the first Passenger Side Center Bracket by using (2) M8 x 30MM Flange Bolts.

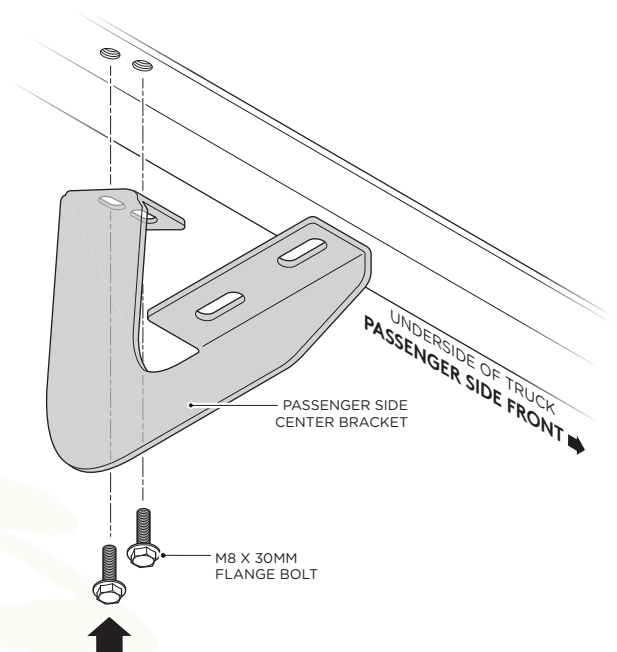

6. Fasten the top portion of the second Passenger Side Center Bracket by using (2) M8 x 30MM Flange Bolts.

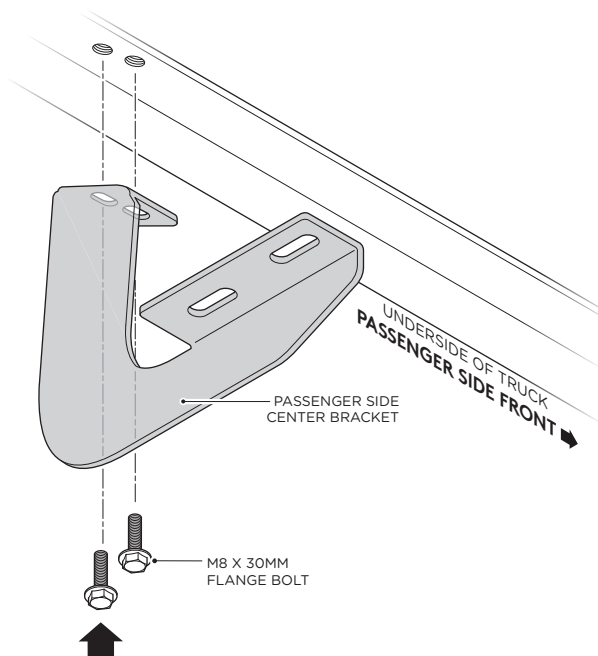

7. Fasten the top portion of the Passenger Side Rear Bracket by using (2) M8 x 30MM Flange Bolts.

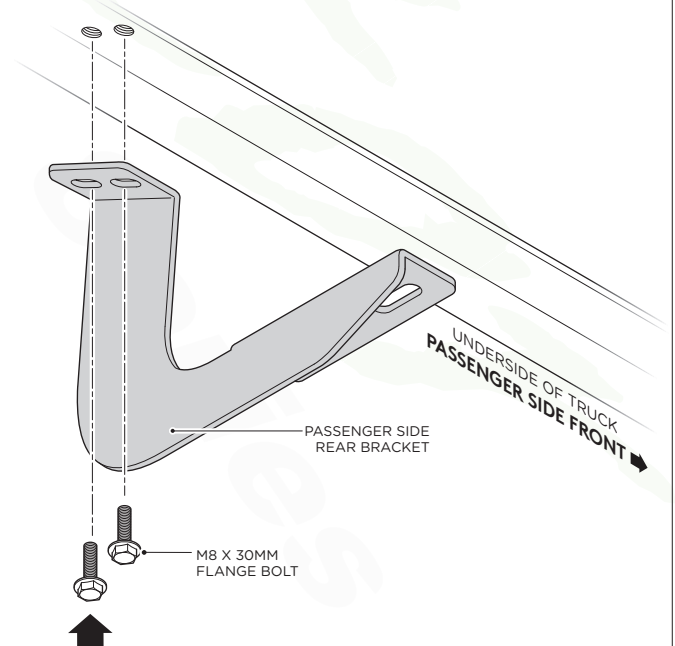


RUNNING BOARD INSTALLATION

PASSENGER SIDE


Raptor
Series

NOTE: Jump to pages 8 and 9 for board setup before proceeding with board installation.


- 8.** Fasten the Running Board to the Passenger Side Front Bracket cradle by using (2) M8 Flange Nuts.

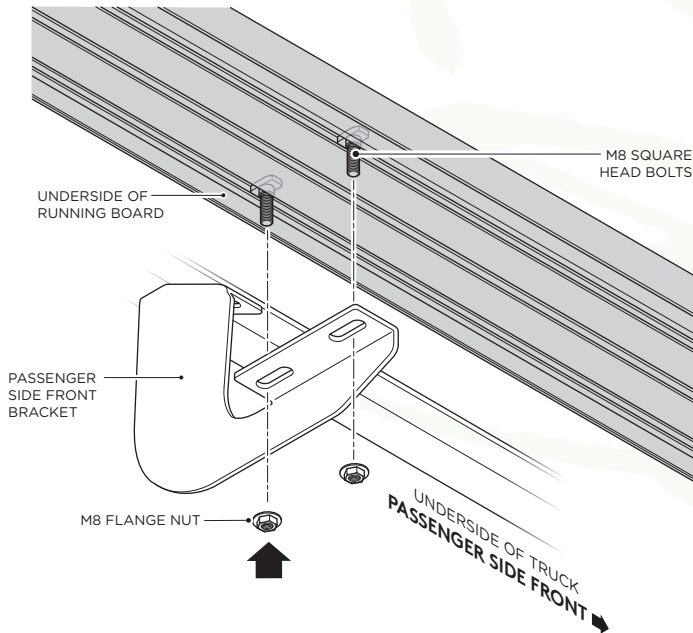


- 9.** Fasten the Running Board to the first Passenger Side Center Bracket cradle by using (2) M8 Flange Nuts.

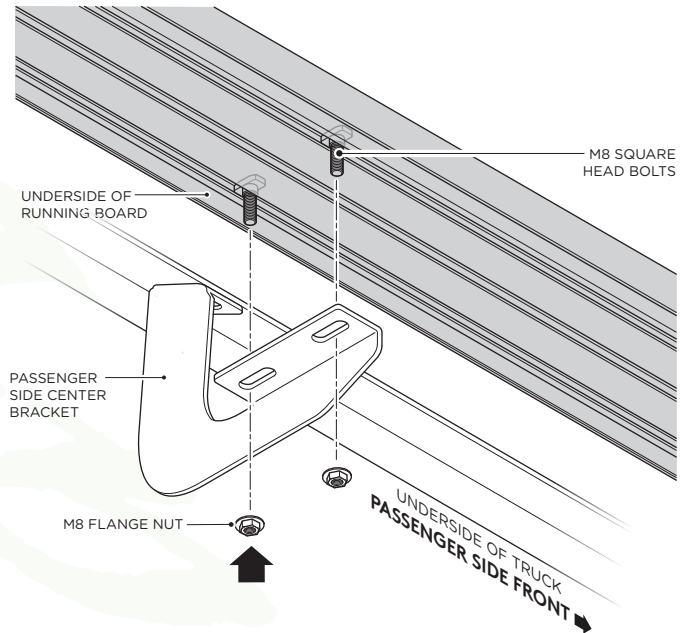

- 10.** To fasten the Running Board to the second Passenger Side Center Bracket cradle, insert (2) M8 Square Head Bolts (10a), then fasten using (2) M8 Flange Nuts.

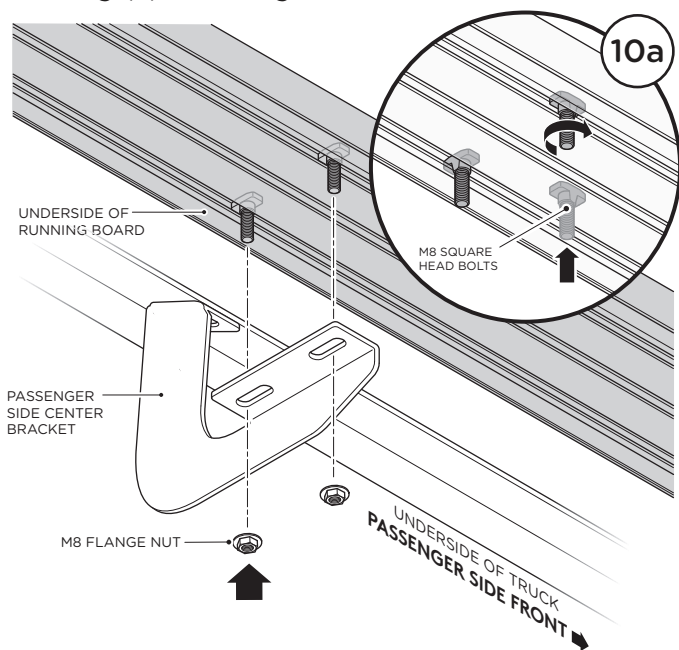

- 11.** Fasten the Running Board to the Passenger Side Rear Bracket cradle by using (2) M8 Flange Nuts.

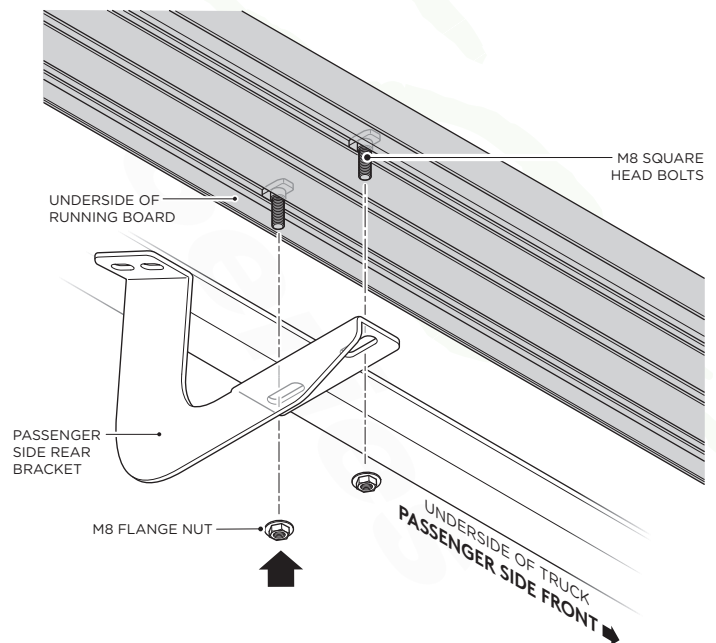


6.5" SAWTOOTH RUNNING BOARD ADAPTER PLATE INSTALLATION

Raptor
Series

Flip Running Board over. Place each Backing Plate and each Bolt Adapter Plate together (1a) and place onto underside of the running board and through the notch (1b). Slide plates into channels of running board and position plates so they line up approximately with existing mounting bracket location (1c).

Note: It might be helpful to position the underside of running board parallel to the existing mounting plates already installed on your vehicle, so you can align the Backing Plate/Bolt Adapter more accurately.

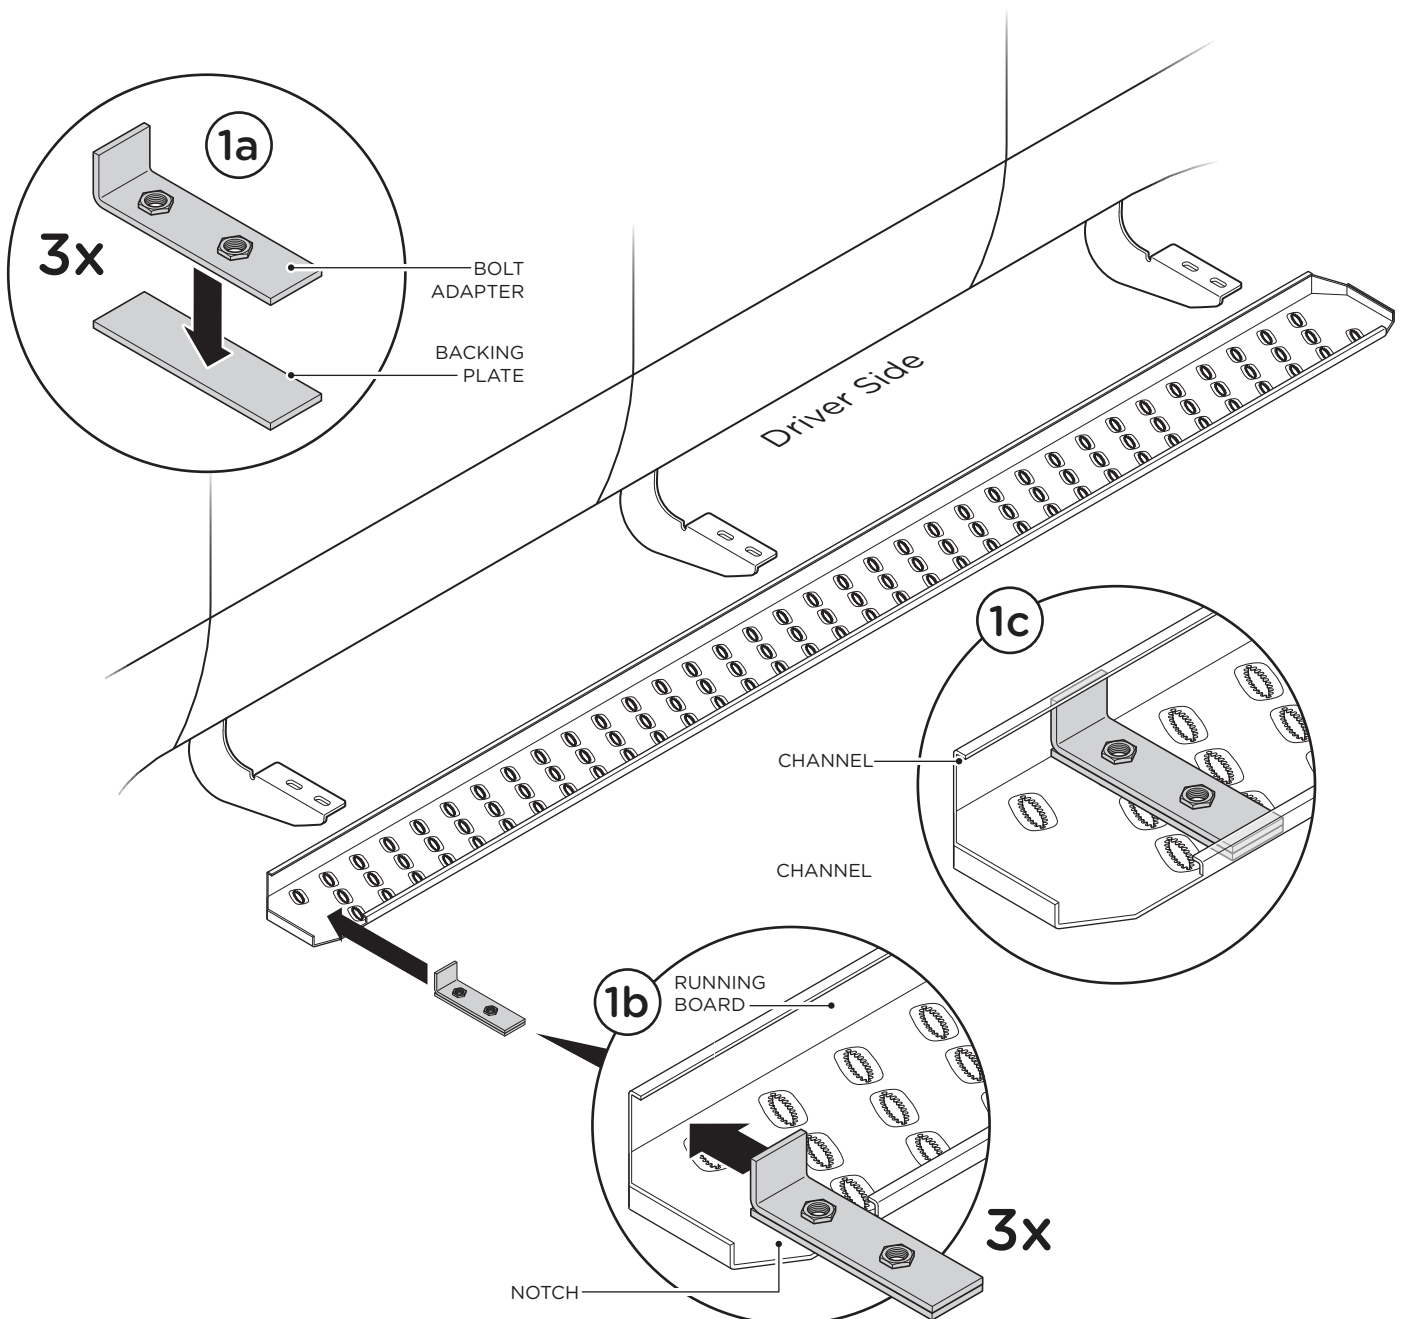

6.5" SAWTOOTH RUNNING BOARD ADAPTER PLATE INSTALLATION

Raptor
Series

You may need to adjust the plates slightly to align with the existing brackets (2a). Once aligned, insert provided allen drive studs into the holes on the Bolt Adapter Plate (2b), and finger tighten to hold both plates securely in place (2c), while still allowing for further adjustment to match up with vehicle mounting brackets. Repeat steps 1 and 2 for passenger side.

