

RTS24CH



Hardware Kit Includes Loose:

- (A) 12 – Hex head bolts (M8-1.25 x 25mm)
Grade 8
- (B) 12 – Hex head bolts (M8-1.25 x 20mm)
Grade 8
- (C) 36 – Flat washers (M8) Grade 8
- (D) 24 – Lock washers (M8) Grade 8
- (E) 12 – Hex head nuts (M8-1.25) Grade 8
- (F) 12 – Long U-Nuts (M8-1.25)

Components List:

- (F) 2 – 1 Driver/1 Passenger RT Step
- (H) 6 – Mounting Brackets
RTSPN043

2015 Chevrolet Colorado Ext-Cab Installation Instructions

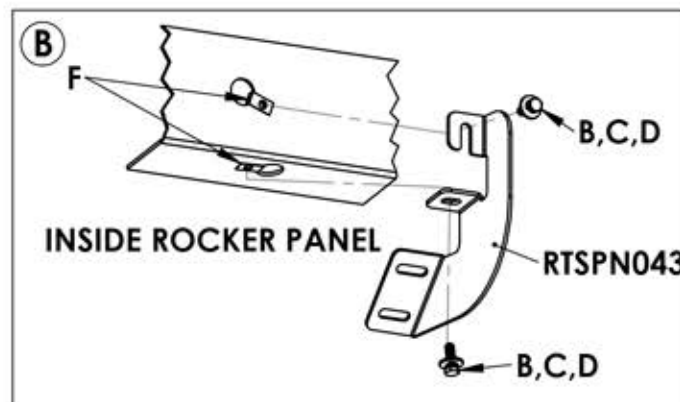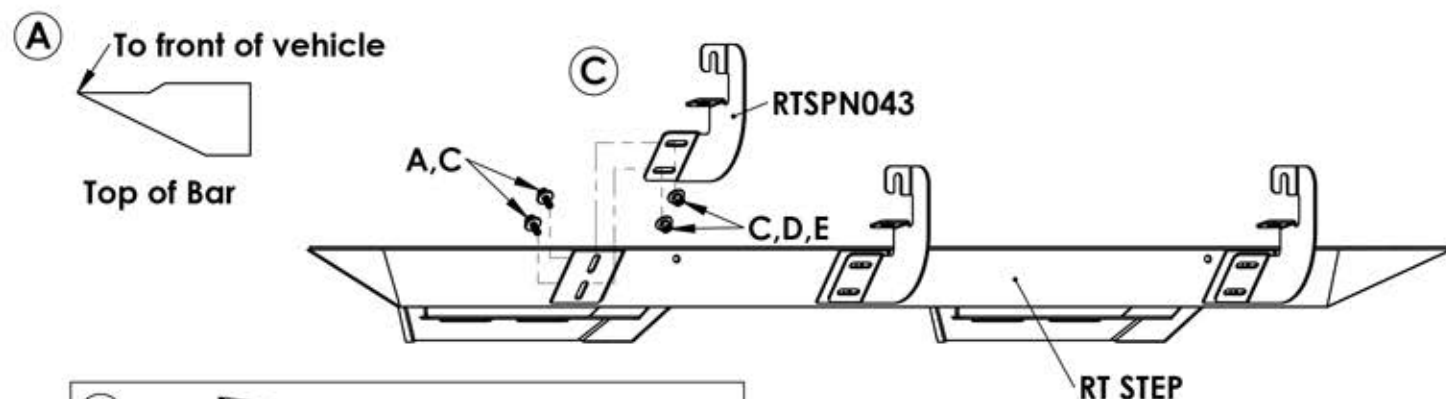

**LOOSE FIT ALL COMPONENTS.
DO NOT TIGHTEN UNTIL ALL
COMPONENTS ARE INSTALLED
AND ADJUSTED.**

**DISCLAIMER: USE ONLY
COMPONENTS AND HARDWARE
SUPPLIED BY ICI.
NO SUBSTITUTIONS.**



Step by Step Installation Instructions

- STEP 1:** Read and understand instructions completely before beginning installation. Remove all old steps and hardware from truck.
- STEP 2:** Locate the driver's side step (the notched end of the Magnum RT Steps goes to the front of the vehicle). See Fig A.
- STEP 3:** The mounting brackets are the same for both driver and passenger sides. Locate (3) RTSPN043 mounting brackets to be used on the driver side. Looking underneath the truck at the driver side inside rocker panel there are 8 black, plastic plugs along the length of the cab. Next to the black plastic plugs are smaller holes. Starting at the front of the cab, remove the first 6 plugs, leaving the last two at the rear of the cab in place. Once, plugs have been removed, insert provided U-Nuts. See (fig B).
- STEP 4:** Once the U-Nuts have been installed, loosely fit RTSPN043 brackets to inside rocker panel with provided hardware. See Fig B. Do not fully tighten.
- STEP 5:** Once brackets are fitted, loose fit Magnum RT Steps using provided hardware (Fig C). Once Magnum RT Steps are loose fit, tighten brackets to inside rocker to (**DO NOT USE IMPACT TOOLS**). Next, adjust bar up/down and front/back then tighten step to brackets
- STEP 6:** Repeat for passenger side.



**ATTN: STATE OF CALIFORNIA CONSUMERS
WARNING: CANCER AND REPRODUCTIVE HARM
WWW.P65WARNINGS.CA.GOV**